READY POP

SET UP INSTRUCTIONS










Remove frame and graphic from nylon bag.



Ensure "adjustable feet" of frame are on the floor. Pull up display into upright position.

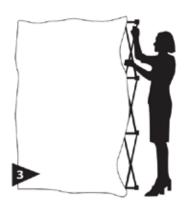

Lock all hooks between front and back hubs.



Adjust leveling feet for desired angle. Ready pop display can now easily be moved into position.



OPTIONAL

Attach lights to top of frame by sliding the plastic "x blocks" under the frames cross sections.

Warning: To avoid damage, separate end caps & disconnect ALL hooks before collapsing the frame.

How to install or replace graphics on your OneFabric:



Remove existing graphic.



Assemble frame and lay flat on its back. Starting at one corner, attach velcro on the graphic to velcro on the frame. NOTE: Velcro on the graphic should extend approx. 1/4" - 1/2" beyond velcro on the frame (it should not be flush).



Working in a continuous direction around the frame, attach the rest of the graphic. Make sure the graphic is pulled taut while attaching the velcro.



If needed, adjust velcro for taut fit.